


## Cero /Designer Bryan Steendyk





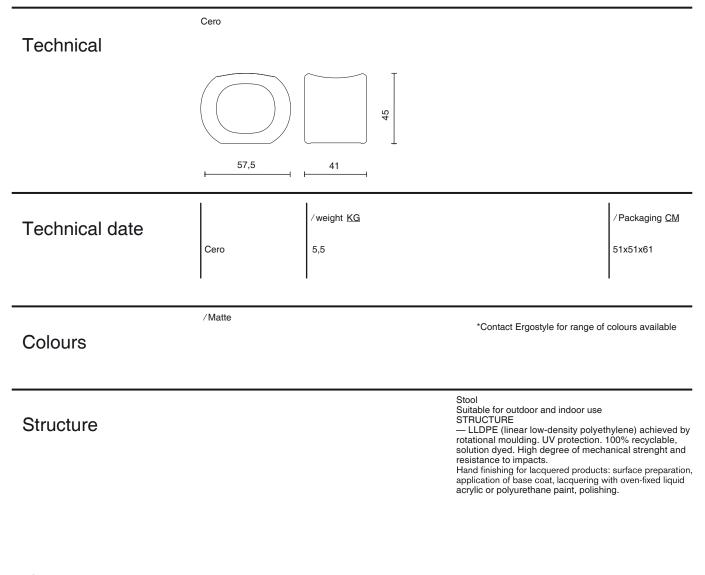



# /Warnings

— To remove dust and dirt from the plastic surfaces, the product needs periodic cleaning with a damp cloth soaked in neutral liquid soap, better if diluted in water. Avoid the use of ethanol or any liquid containing, even in small amounts, acetone, trichloroethylene and ammonia (solvents in general).

ENG Maintenance

Recycling — It cannot be treated as domestic waste. Correct disposal will contribute to avoid danger to the environment, people and animals, and will favour the recovery of the recyclable materials of which it is made. When the product has finally reached the end of its life it will have to be sent to the Differentiated Collection Centres. For further information on disposal consult your dealer or the competent offices of your local administrative bodies.

Warning — Comply with the cleaning instructions and appropriate use of the product. — Do not overload the seat structure, to avoid deforming. Do not stand on the seat; the product must have the feet resting on a regular and flat surface. When the product is to be moved, take care to lift the product of the ground to avoid damage. - Keep away from excessive heat sources.

Responsability — Ergostyle declines any liability to damages caused to things or persons by an illegitimate use of the product.

## Restitution

- Ergostyle won't accept any returned goods without having checked the kind of defect first.

## Guarantee

The item is guaranteed for 2 years from the date of purchase, granted that item is appropriately used. Invoice is to be kept as proof of purchase date.

